



INSTALLATION MANUAL

Demand PCB








EKRP1AHTA



4PW54553-1 B 0000000P


4PW54553-1B 05.2011

*KHDRD*AA

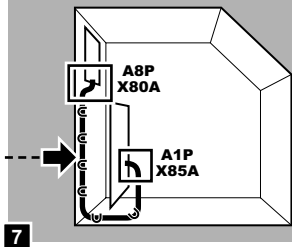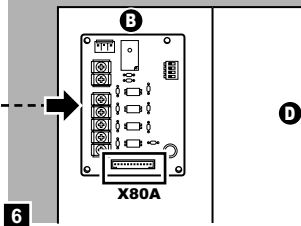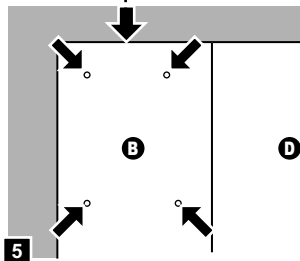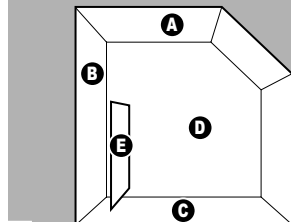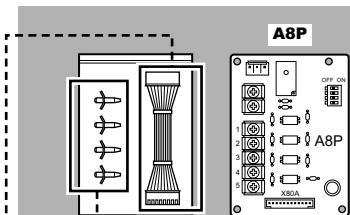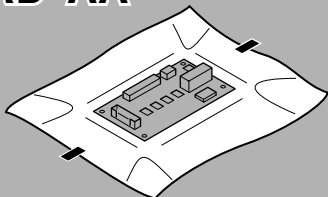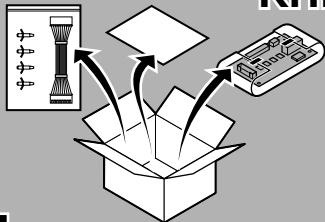


EKRP1AHTA Demand PCB
Installation manual 4PW54553-1B


*KHBRD*ABV1

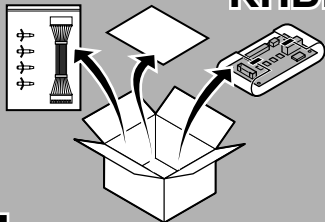


1

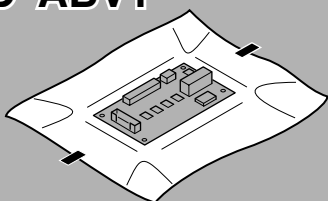


2

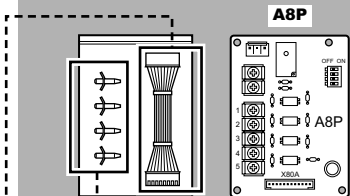


3

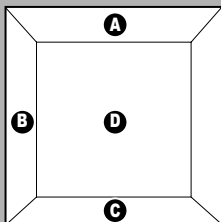


4

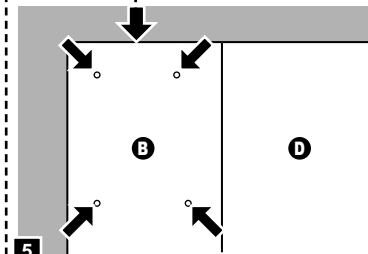

5

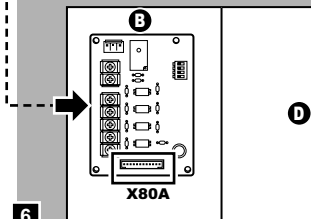


6

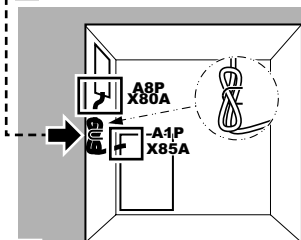

7




 *KHBRD*ABV1




EKRP1AHTA Demand PCB
Installation manual 4PW54553-1B


*KHBRD*ABY1

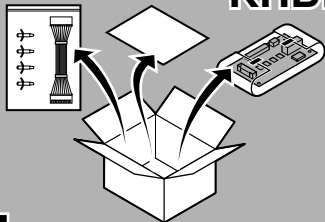


1

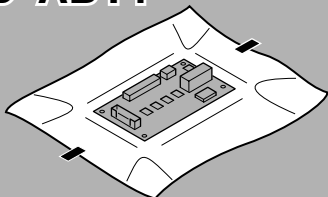


2

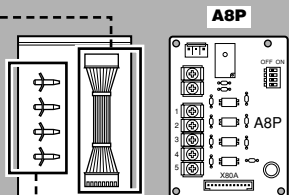


3

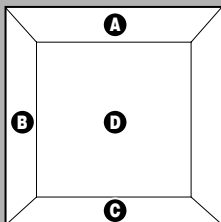


4

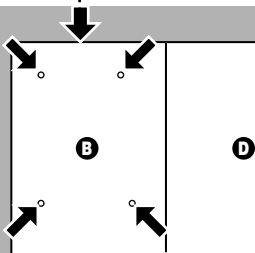

5

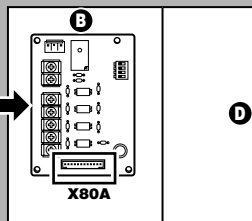


6

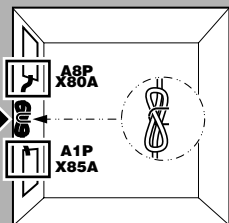

7




 *KHBRD*ABY1




EKRP1AHTA Demand PCB
Installation manual 4PW54553-1B


EKHVM*

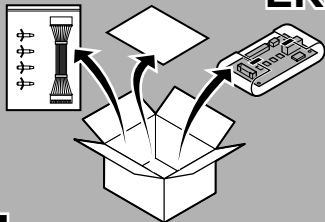


1

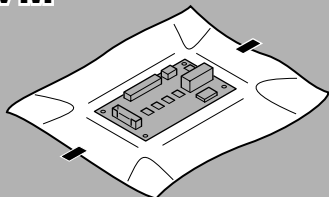


2

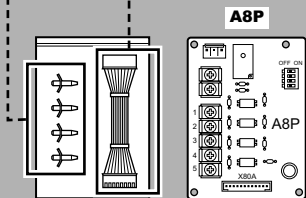


3

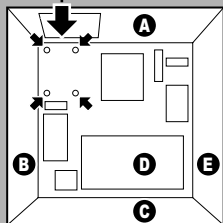

4

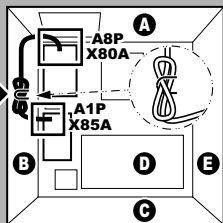

6

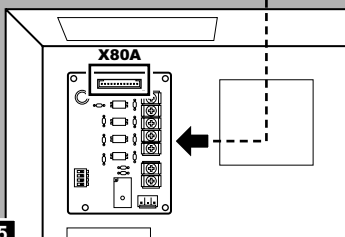


5




EKRP1AHTA Demand PCB

Installation manual 4PW54553-1B

EWA/YQ016~032*







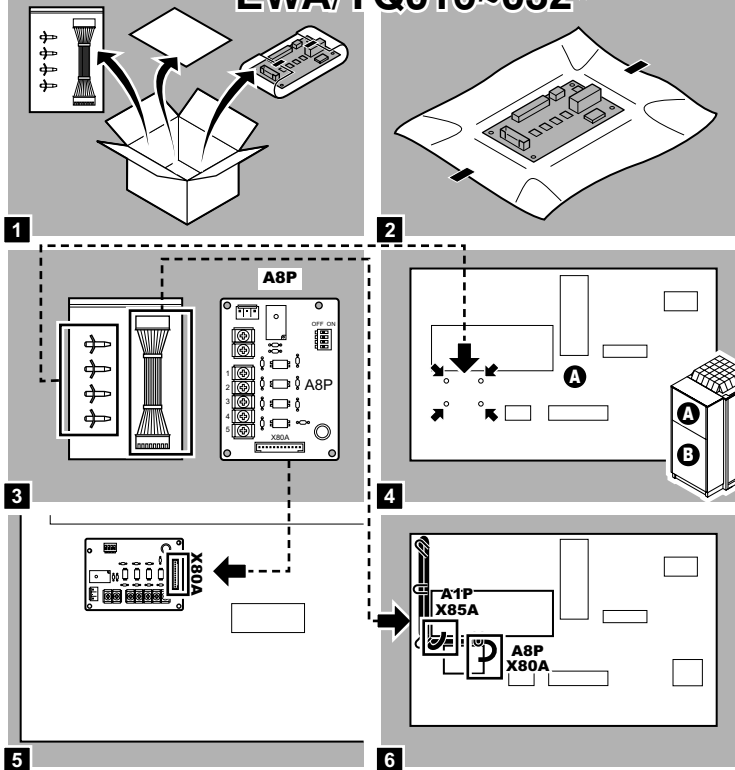


EWA/YQ016~032*

 

EKRP1AHTA Demand PCB
Installation manual 4PW54553-1B

EWA/YQ040~064*

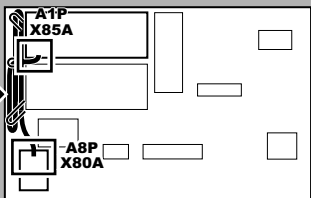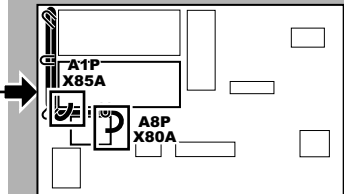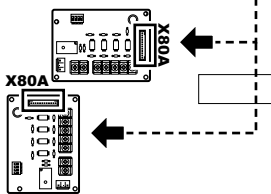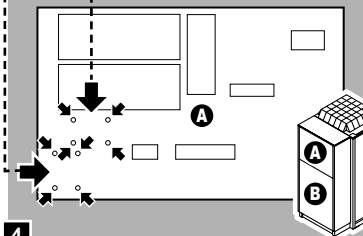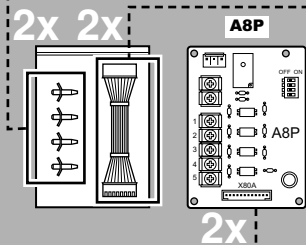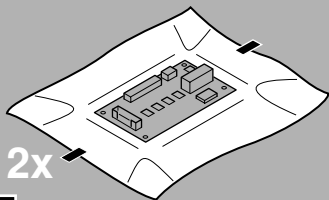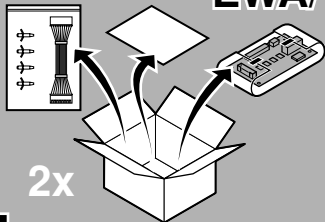

EKRP1AHTA Demand PCB
Installation manual 4PW54553-1B

DAIKIN EUROPE N.V.

Zandvoordestraat 300, B-8400 Oostende, Belgium